


EZ CLICK LAVATORY DRAIN

Cat. No.
I5708
I5710



INSTALLATION INSTRUCTIONS

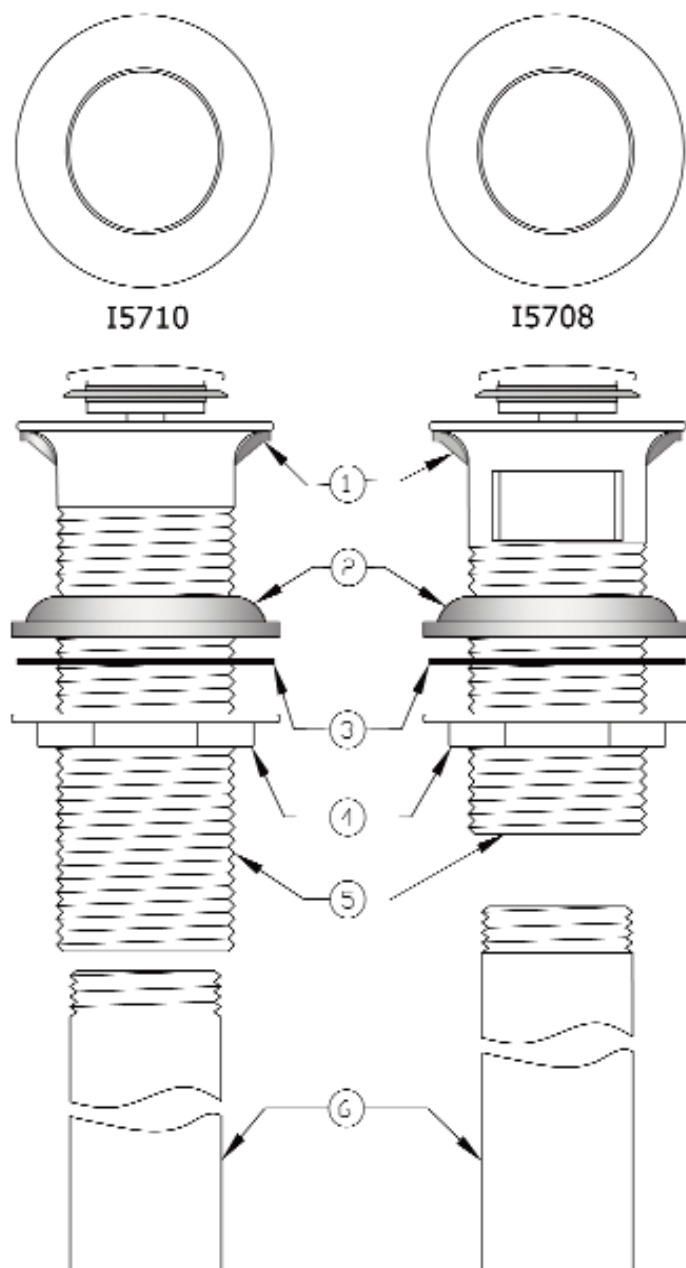

PARTS LIST	
①	SILICONE FLANGE GASKET
②	SILICONE NECK WASHER
③	SILIP WASHER
④	NUT
⑤	DRAIN BODY
⑥	TAILPIECE

INSTALLATION INSTRUCTIONS

1. REMOVE PARTS 2, 3, 4 & 6 FROM DRAIN. DO NOT REMOVE SILICONE GASKET 1.
2. PLACE DRAIN BODY INTO HOLE IN SINK.
3. MEASURE LENGTH OF TAILPIECE AND CUT TO SIZE. REMOVE SHARP EDGE ON TUBE.
4. SLIDE PARTS 2 & 3 ON TO BODY. SCREW ON LOCKNUT 4 BUT DO NOT MAKE TIGHT AND KEEP SPACE TO LIFT DRAIN.
5. APPLY TEFLON TAPE TO THREADS ON DRAIN TUBE AND SCREW INTO DRAIN BODY. MAKE TIGHT.
6. LIFT DRAIN AND SLIP TAILPIECE INTO TRAP.
7. PUSH UP PARTS 2 & 3 AND TIGHTEN THE NUT 4.
8. CHECK FOR LEAKS.

FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SCOUR[®], SCRUBBING BUBBLES[®] OR COMET[®] TO CLEAN. DO NOT USE BRISTLE OR SCOTCH BRITE[®] PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE USING A SOFT CLOTH. STANDARD WINDEX[®] CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CANNULA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.

WARRANTY

CONTACT BARCLAY FOR WARRANTY INFORMATION. CLAIMS REQUIRE PROOF OF PURCHASE.